

THIS MANUAL IS FOR THE FOLLOWING MODELS

Dieses Handbuch gilt für die folgenden Modelle | Ce manuel concerne les modèles suivants | Este manual es para los siguientes modelos | 此手册适用于以下型号

Model Nr.	Product Name	Color
PH-GO360M25G2LCD_DBK01	Glacier One 360M25 LCD	Black
PH-GO360M25G2LCD_DWT01	Glacier One 360M25 LCD	White

LEGEND

Legende | Légende | Leyenda | 说明

- Remove | Entfernen | Retirer | Eliminar | 移除
- Install | Installieren | Installer | Instalar | 安装
- Loosen | Lösen | Desserrer | Aflojar | 拧松

 
Phanteks will not take responsibility for any damages incurred due to incorrect installation or usage of this product.

Phanteks übernimmt keine Verantwortung für Schäden, die durch eine falsche Installation oder Verwendung dieses Produkts entstehen.

Phanteks décline toute responsabilité en cas de dommages résultant d'une installation ou d'une utilisation incorrecte de ce produit.

Phanteks no se responsabilizará de los daños ocasionados por la instalación o el uso incorrectos de este producto.


Phanteks 不会对安装中失误造成的任何损失负责, 请仔细阅读本手册。

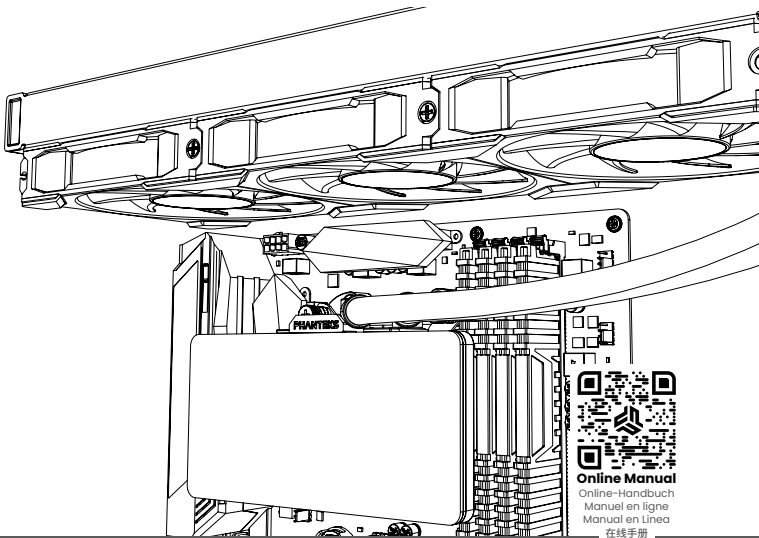


SCOPE OF DELIVERY

Lieferumfang | Contenu de la livraison | Alcance de la entrega | 配件清单

 
MAIN COMPONENTS

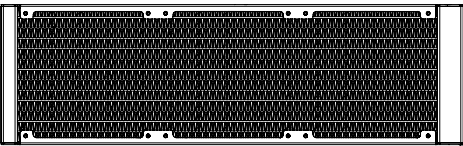

Radiator
Including Pump Module
x1

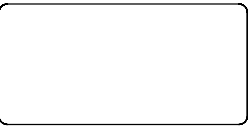 


LCD6~HD Module
x1

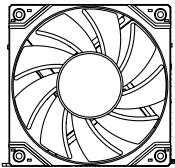 

M25G2 Fan¹
Pre-connected
x3

ARGB LIGHT DIRECTION

ARGB-Lichterichtung | Direction de la lumière ARGB | Dirección de la luz ARGB | ARGB灯方向

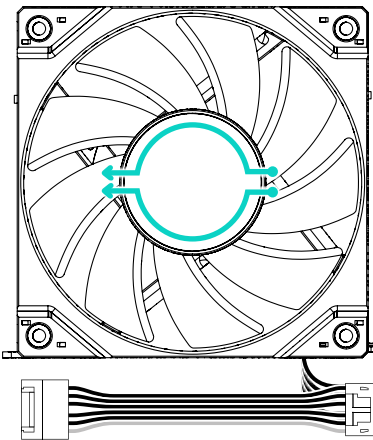 

THE ARGB LIGHT DIRECTION STARTS FROM THE CONNECTOR SIDE ON THE FAN.

Die ARGB-Lichterichtung beginnt auf der Anschlussseite des Lüfters.


La direction de l'éclairage ARGB commence du côté du connecteur sur le ventilateur.

La dirección de la luz ARGB comienza desde el lado del conector del ventilador.

ARGB 灯光方向从风扇上的连接器侧开始。

MOUNTING HARDWARE

Montagezubehör | Le matériel de montage | Accesorios de montaje | 安装硬件

 

AMD Stand-off
AM4 | AM5
x4



Radiator Screws
6 mm | 6-32 UNC
x12¹



Intel Stand-off
115X | 1200 | 1700 | 1851
x4



Radiator Screws
30 mm | 6-32 UNC
x12¹



Thumb Nuts
x4



Intel 115X | 1200 | 1700 | 1851
Backplate
x1



AMD Bracket
AM4 | AM5
x1



Intel Bracket
115X | 1200 | 1700 | 1851
x1

ACCESSORIES

Zubehör | Accessoires | Accesorios | 配件




USB to Type-C Cable
600 mm
x1



Screw Cover Corners
Left | Right
x2¹ | x2¹



 
LINQ6 Extension Cable
500 mm
x1



Screw Cover Bridge
x4¹



 LINQ6 Adapter
500 mm
x1



Tube Clips
x3

¹Quantity may vary on radiator size.

Die Menge kann je nach Halbleitungsgröße variieren.
La quantité peut varier selon la taille du radiateur.
La cantidad puede variar según el tamaño del radiador.
数量可能根据散热器尺寸而变化。

²Follow mainboard manual for instructions on ARGB control.

Befolgen Sie für Anweisungen zur ARGB-Steuerung das Motherboard-Handbuch.
Suivez le manuel de la carte mère pour obtenir des instructions sur le contrôle ARGB.
Siga el manual de la placa base para obtener instrucciones sobre el control ARGB.
参考主板说明书了解ARGB灯光控制。

³Controller is needed for ARGB functions.



Für ARGB-Funktionen ist ein Controller erforderlich.
Un contrôleur est nécessaire pour les fonctions ARGB.
Se necesita un controlador para las funciones ARGB.
需要控制器才能使用ARGB功能。

1 PREPARE MAINBOARD

Motherboard vorbereiten | Préparer la carte mère | Preparar la placa base | 准备主板



1A INTEL I15X | 1200 | 1700 | 1851

  PROCEED TO STEP 2. ▾


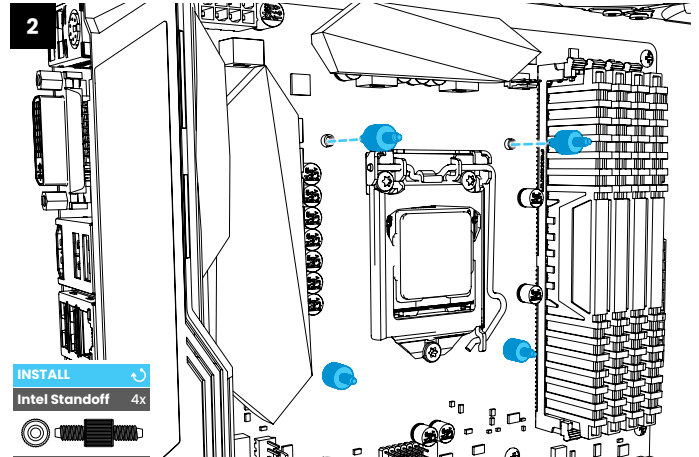
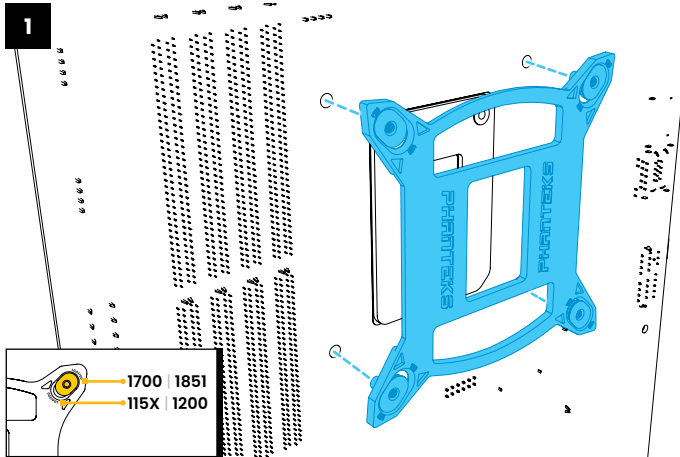


AMD AM4 | AM5

  PROCEED TO STEP 2. ▾

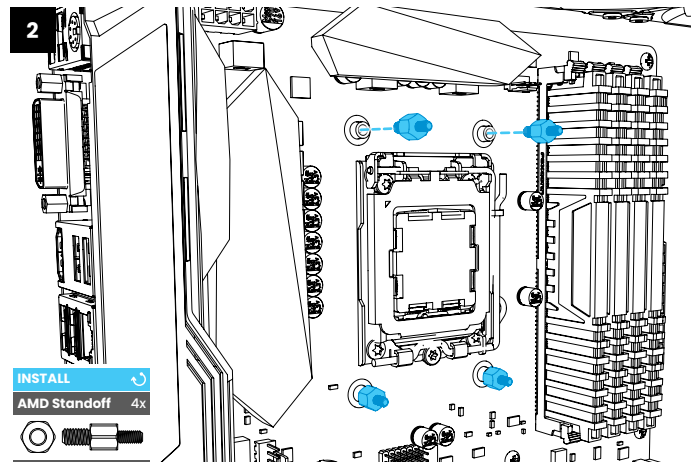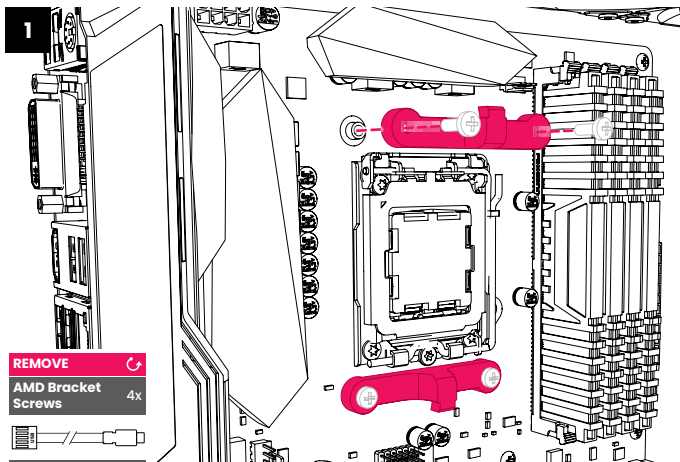


2 INSTALL AND SECURE BRACKET

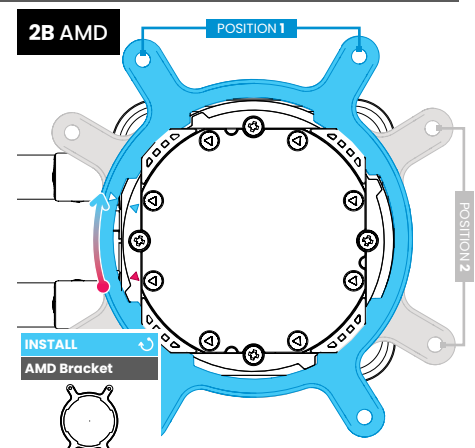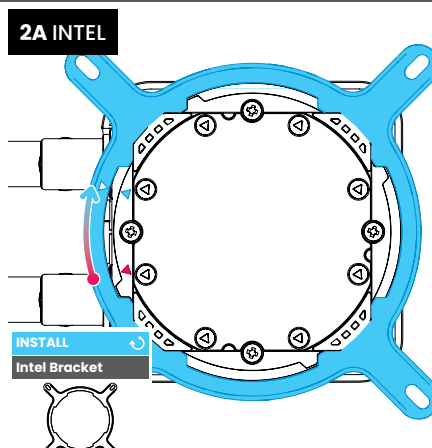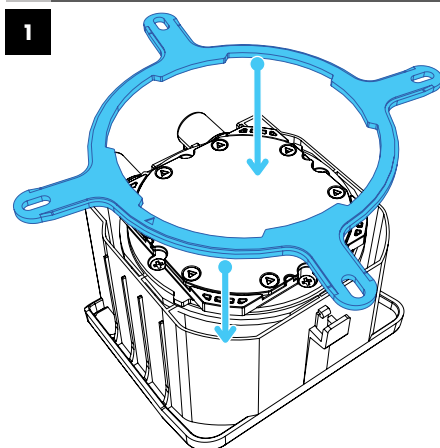   

LCD DISPLAY POSITION

Depending on the bracket position, the LCD display will be either horizontal or vertical on installation.

Je nach Position der Halterung wird das LCD-Display bei der Installation horizontal oder vertikal ausgerichtet. | Selon la position du support, l'écran LCD sera installé à l'horizontale ou à la verticale. | Según la posición del soporte, la pantalla LCD se instalará en orientación horizontal o vertical. | 根据支架位置不同, LCD 显示屏安装时将呈横向或纵向。

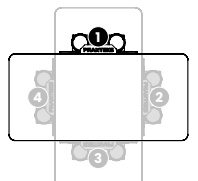 


2 INSTALLING CPU BLOCK

CPU-Block installieren | Installation du bloc CPU | Instalación del bloque de CPU | 安装CPU模块


SECURE CPU BLOCK

Sicherer CPU-Block | Bloc CPU sécurisé | Bloque de CPU seguro | 安装CPU模块

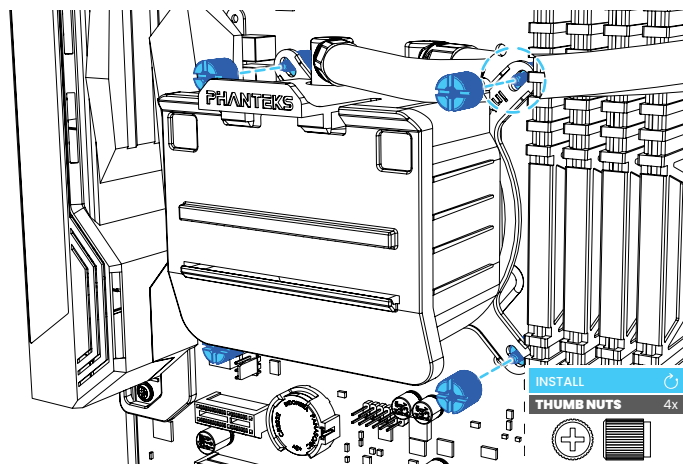 



CONNECT CPU BLOCK

CPU-Block anschließen | Connecter le bloc CPU | Conectar el bloque de CPU | 连接CPU模块

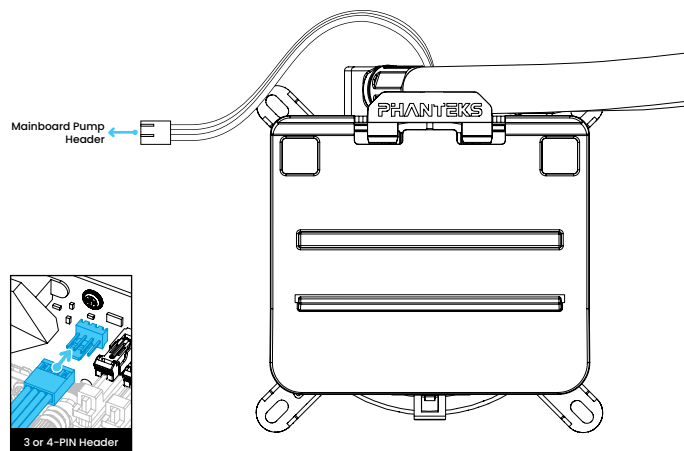 


3 MOUNT THE RADIATOR AND FANS

Montieren Sie den Kühler und die Lüfter | Montez le radiateur et les ventilateurs | Monte el radiador y los ventiladores | 安装散热器和风扇

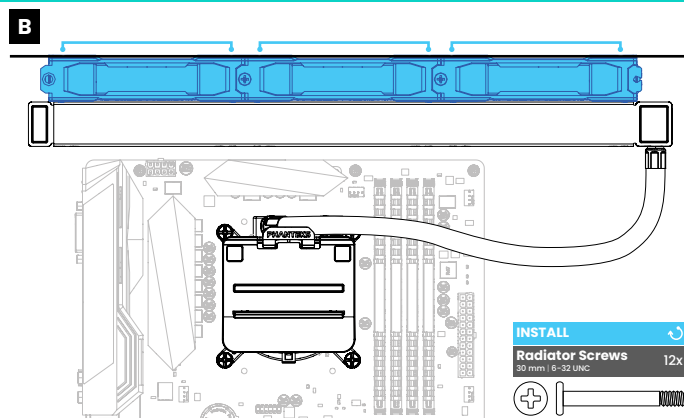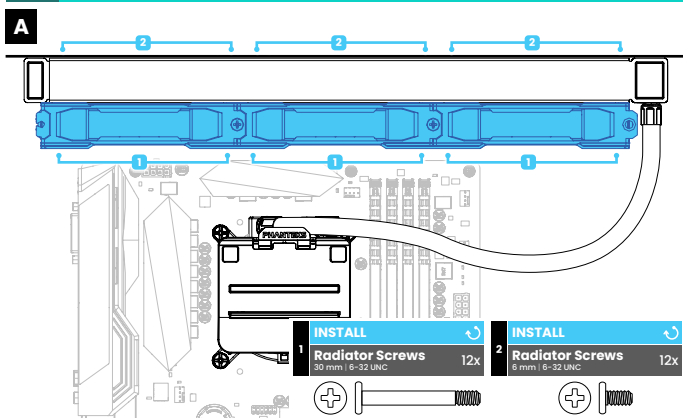  


4 INSTALL SCREW COVERS

Schraubenabdeckungen anbringen | Installer les cache-vis | Instalar cubiertas de tornillos | 安装螺丝盖

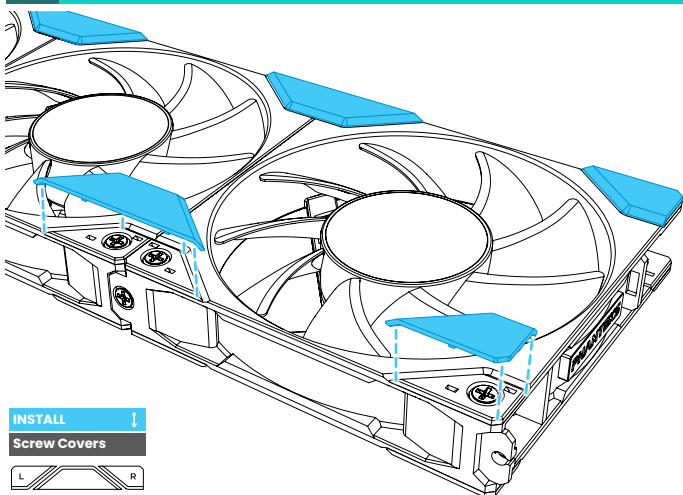 

5 CONNECT FAN CABLE

Lüfterkabel anschließen | Connectez le câble du ventilateur | Conectar el cable del ventilador | 连接风扇线材

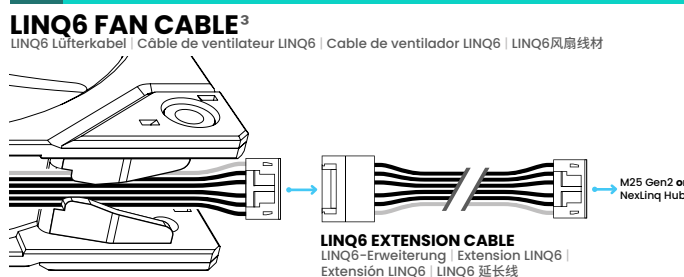 

OPTIONAL LINQ6 ADAPTER

Optional LINQ6-Adapter | En option adaptateur LINQ6 | Opcional Adaptador LINQ6 | 可选 LINQ6 转接线





6 LCD MODULE

LCD-Modul | Module LCD | Módulo LCD | 液晶显示模块


INSTALL USB CABLE

USB-Kabel installieren | Installer le câble USB | Instalar el cable USB | 安装USB线材

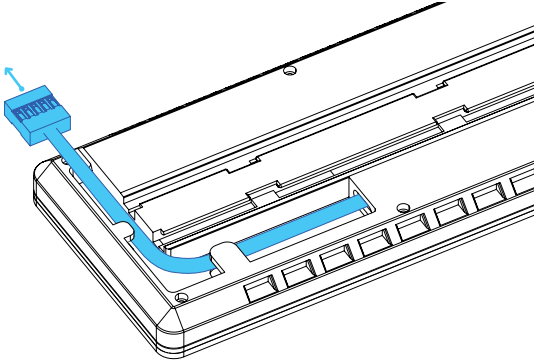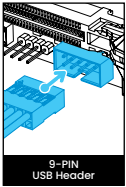  


INSTALL

 USB-C



LCD POSITION

LCD-Position | Position de l'écran LCD | Posición de la pantalla LCD | 显示屏位置


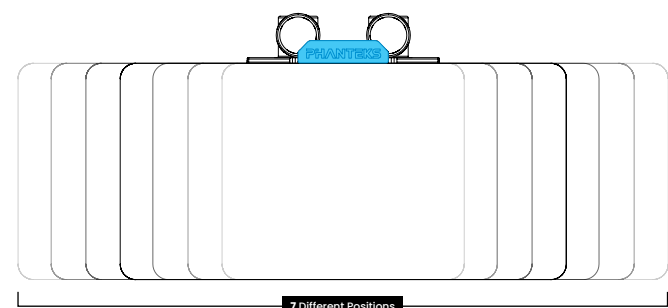 


7 Different Positions

Verschiedene Positionen | Différentes positions | Diferentes posiciones | 不同位置

INSTALL LCD MODULE

LCD-Modul installieren | Installer le module LCD | Instalar el módulo LCD | 安装显示屏模块

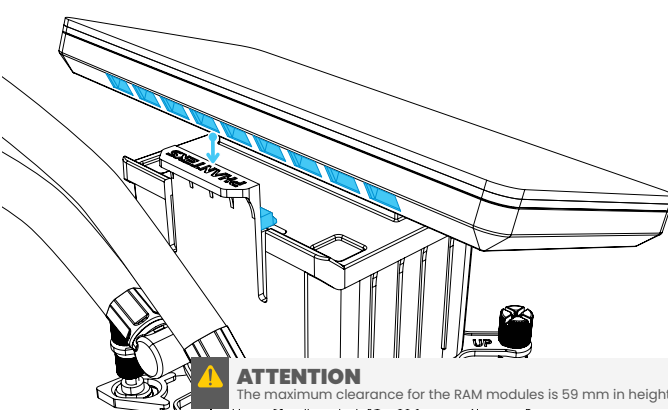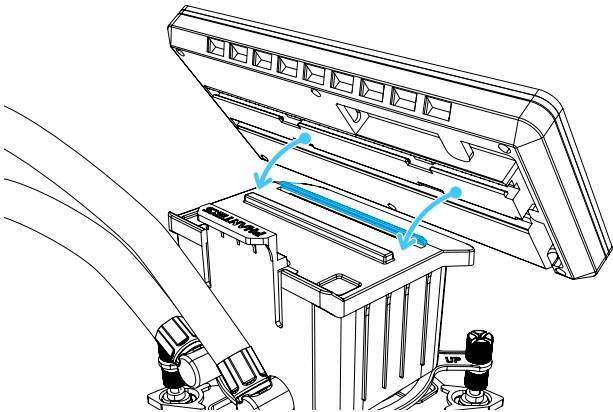  


ATTENTION

The maximum clearance for the RAM modules is 59 mm in height.

7 INSTALL TUBE CLIPS

Rohrschellen montieren | Installer les clips pour tubes | Instalar clips de tubo | 安装管夹

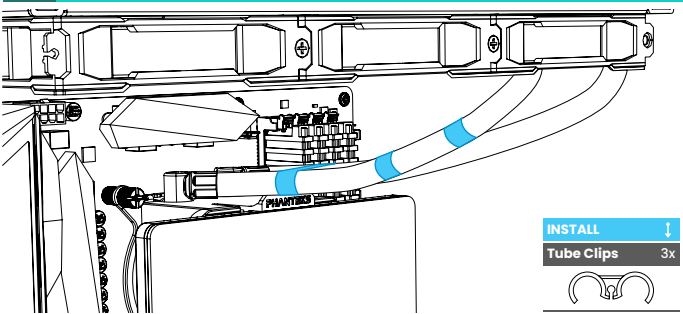 

INSTALL

Tube Clips

3x

INSTALL SOFTWARE

Software installieren | Installer le logiciel | Instalar el software | 安装软件

NEXLINQ SOFTWARE
www.phanteks.com/NexLinq



EN Please visit our website to download the latest version of the NexLinq software.

DE Bitte besuchen Sie unsere Website, um die neueste Version der NexLinq-Software herunterzuladen.

FR Veuillez visiter notre site web pour télécharger la dernière version du logiciel NexLinq.

ES Por favor, visite nuestro sitio web para descargar la última versión del software NexLinq.

CN 请访问我们的网站以下载最新版本的NexLinq软件。

SAFETY INFORMATION

Sicherheitsinformation | Information de sécurité | Información de seguridad | 安全信息

In order to achieve maximum safety, we suggest that you adopt the following guidelines:

1. Place the product on a clean and stable surface that allows adequate air ventilation.
2. Don't use or place the product and any of its components near water, moisture, or other wet surfaces; or place the product near any heat, open flame, or other hot surfaces such as radiators, stoves, fireplaces, and candles.
3. Use caution when operating the desktop PC to avoid electrical shock or damage, such as unplugging the power supply during thunderstorms, ensuring that your hands are dry before using (and handling) the desktop PC, keeping it away from any source of liquid and/or heat source, and using all other reasonable precautions needed under the circumstances.
4. When connecting external devices to your desktop PC, carefully plan how the wires will be placed. Protect any connected cables from being trod on or pinched, particularly at plugs, convenience receptacles, or the point where they exit from.
5. Take extra caution when handling/removing/reattaching glass components. Once removed, place the glass component on a stable surface first before proceeding.
6. When unplugging any connected devices and/or cables, always pull the cable or device's plug or connector. Don't forcefully tug on its cord.
7. Don't place any heavy items on top of the product.
8. Make sure that the desktop PC is off, unplugged from the outlet, and that all connected devices are powered off and unplugged (if any) before installing or uninstalling any internal component to and/or from the desktop PC or product.

NOTE ON DISPOSAL



The WEEE symbol indicates that this product must not be disposed of with normal household waste. Through the correct disposal of this product, you will help protect the environment. For more information on the disposal of this product, please contact your local municipality, your waste disposal service or the shop where you purchased the product.



FR Cet appareil se recycle



Points de collecte sur www.quefairede mesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Phanteks Group Inc.
11F., No. 150, Jian 1st Rd.,
Zhonghe Dist.
New Taipei City 235

Importer EU
Axpertec Int. B.V. (EU)
Sydneystraat 33
3047 BP Rotterdam
The Netherlands

Importer US
Axpertec Inc. (US)
20465 E Walnut Dr. N
City of Industry, CA 91789
USA